

Android P2P

Mobile Client User Manual

1: Installation

Copy the P2PIPCam.apk file to the storage card of mobile phone, open the file browser, click the P2PIPCam.apk file to install the software

2: Use

➤ **The camera is connected**

1. After the installation is complete machine directly into the 5V 2A power line


2. Into the Internet line

➤ **The camera is added**

1 The program icon found click mobile phone desktop, start software

2 Bar code scanning equipment at the bottom of the password: admin input Done

3 Manually add the following figure: the default user name admin password admin enter Done

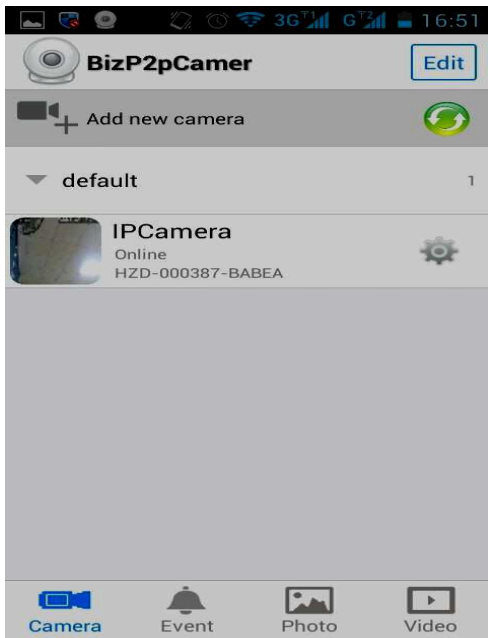

Search out the camera according to the instructions, you can see in the camera list add cameras; as shown below:




➤ Real-time video


Click on the camera list of cameras into the device browser interface, click anywhere on the screen to display the operation keys PTZ direction, control PTZ direction, as shown below:




Slide the screen to control the direction of the red arrow head up and down

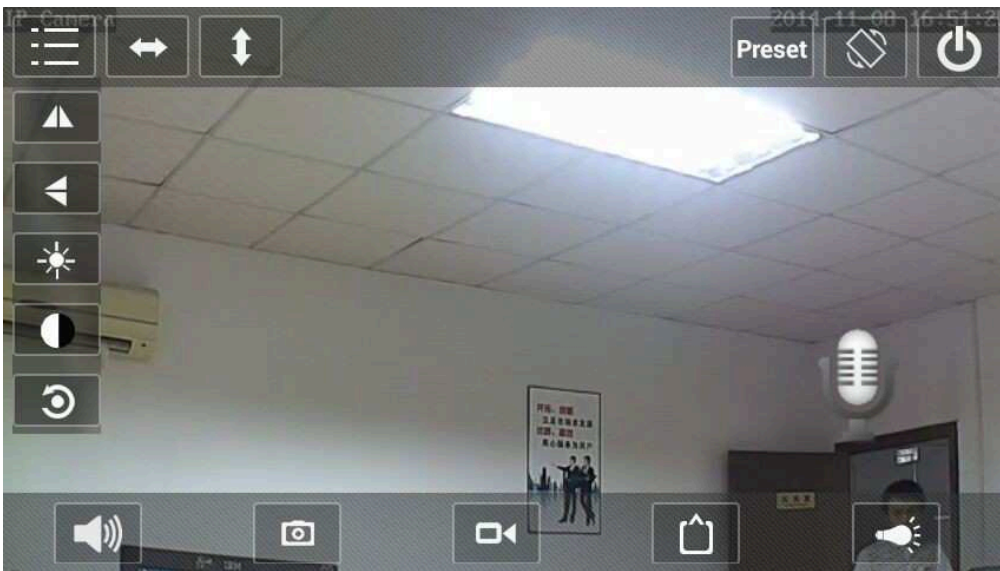

Voice Monitor

 

Talkback

 

Snapped pictures



 
Resolution switching



Dimming



Contrast adjustment




Resume video defaults




Manual Recording



 
: Mirror image



: Image Flip

 

: Cruising around

 

: Cruising down

➤ Camera Settings

Click on the right side of the device corresponding to the selected device

Settings icon into the camera settings interface, as shown below:



1. WIFI settings:

Click Settings to enter WIFI setting interface. Choose a nearby WIFI hotspot, choose a wireless router after entering the password and click OK, restart the machine after a successful WIFI connection, as shown below:



2. User Settings:

Click the User Settings is set to enter the user interface, modify the current device user name and password, as shown below:



3. Alarm settings

Click to enter the alarm setting interface alarm settings, select the appropriate alarm trigger conditions and trigger events, as follows:



4. Clock Set

Click the clock settings, enter the clock setting interface, the equipment for the school, the following chart:



5. Mail Settings

Click the e-mail settings, enter the e-mail. Set e-mail parameters, as follows:



6. FTP settings

Click FTP settings, enter the FTP settings, configure the FTP server parameters; the following chart:



➤ **modify the camera**

In the top right of the device list and click interface "Edit" button to enter the camera to modify the interface, as shown below:



➤ **alarm events**

In the main interface, click the alarm, enter the alarm event interface, as shown below:



➤ **View snapped pictures**

In the main interface, click on the image to view the local capture images, as shown below:



Preview and delete pictures: Press to select the picture, click Open Figure

➤ **view the video**

Click on the video in the main interface to enter to view the video interface, you can view the local video and remote video files, as follows:



➤ with respect to

In the main screen, select the menu key and click on view version information, click Exit mobile client to stop running

➤ Remove Camera

Editing interface into the device, select Delete to delete the selected device current camera, as shown below:



Thank you for using this network camera, due to the difference between each model upgrades or system software caused the appearance or function of this manual is different, please feel free to contact the manufacturer. For these changes sorry that we can not keep you informed.
